



Cat. No. 40-980

Mono Level Control

Your RadioShack Mono Level Control is designed for use as a tweeter level control with a 3-way (RadioShack Cat. No. 40-1299) or 2-way (Cat. No. 40-1296) crossover network, or as a volume level control.

CONNECTIONS

Caution: To prevent a short circuit or damage to your speakers, be sure the speaker wires touch only the intended terminals.

Note: Solder the speaker wires or use a crimping tool to make the connections.

2. Connect the woofer's negative (–) terminal to the tweeter's positive terminal.
3. Connect the crossover network's high-frequency lead to Terminal 3 on the Mono Level Control.
4. Connect the crossover network's common lead to the connection between the woofer and tweeter.
5. Connect the tweeter's negative terminal to Terminal 2 on the Mono Level Control.
6. Connect Terminal 1 on the Mono Level Control to the common lead.

Tweeter-Level Control

Volume-Level Control

ILLUSTRATION

ILLUSTRATION

1. Connect the crossover network's low-frequency lead to the woofer's positive (+) terminal.

1. Connect the amplifier/receiver's positive (+) speaker output leads to Terminal 1 on the Mono Level Control. Then connect a wire from Terminal 1 to the speaker's positive terminal.

© 1993, 1998 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

2. Connect the amplifier/receiver's negative (–) speaker output leads to Terminal 3 on the Mono Level Control.
3. Connect the speaker's negative terminal to Terminal 2 on the Mono Level Control.

3. Set **AUDIO LEVEL** for the desired balance or volume.

Caution: This Mono Level Control is designed for 12.5 watts of average (RMS) continuous power. If the power is higher, the back of the control can get very hot.

OPERATION

 
1. Set the Mono Level Control's **AUDIO LEVEL** control to **MAX**.
2. Set the amplifier/receiver's volume to minimum. Then turn on the amplifier/receiver and set its volume control slightly above the normal listening level.

Note: If the volume is inadequate at **MAX**., slightly increase the amplifier/receiver's volume.

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A8

1AC6P10A09701
Printed in Japan



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A8

1AC6P10A09701
Printed in Japan



Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

3A8

1AC6P10A09701
Printed in Japan